

Design Criteria for Span Tables:

Values in the maximum allowable rail span tables provided herein are subject to the following general criteria and additional criteria shown on individual span tables sheets. Values in span tables are based on the same engineering methodology and calculation algorithms used for U-Builder and are provided here for reference.

Building Assumptions

- Building Risk Category: II
- Mean Roof Height: 30 ft
- Roof Pitch: 0°-45°
- Site Elevation: 0 ft

Wind Design Assumptions

- Wind loads used are based on ASCE 7-16 Sec 29.4.4 with Provisions from SEAOC PV2-2017
- Exposure Category B, C, or D
- Basic Wind Speed = 90 – 180 mph
- Level terrain. Topographic factor, $k_{zt} = 1.0$
- $\gamma_E = 1.0$ for 'Interior' spans, $\gamma_E = 1.5$ for 'Exposed' spans (ASCE 7-16, Fig. 29.4-7)

Snow Design Assumptions

- Ground Snow Load = 0-100 psf
- Exposure Factor coefficients of Partially Exposed condition
- Thermal Factor = 1.0
- Results based on uniform snow load

Seismic Design Assumptions


- 0.2-s Spectral Response Acceleration, $S_S \leq 3$
- $S_S = 1.25$ and 3 per criteria shown on individual span tables sheets.
- $S_1 = 0.5$
- Seismic site class D

Array Assumptions


- Module orientation and Rail direction per criteria shown on individual span tables sheets.
- Maximum module dimensions of 40.1" x 67" (~19 sq.ft, 47.65 lbs) and 41" x 80" (~23 sq.ft, 58.6 lbs) per criteria shown on individual span tables sheets.
- Minimum distance between modules and roof edge is at least twice the module height above roof surface.
- Modules are parallel to roof surface and maximum height above roof surface is 5" to 10" depending on attachment type.
- Gaps between module rows and columns is 0.25" in to 1" depending on clamp type.
- The most restrictive of all roof zone spans shall be used when any part of the module is attributed to that span.
- 'Exposed' spans as defined in ASCE 7-16 sec. 29.4.4 shall be used when any part of an exposed module or panel as is attributed to that span.

Span Tables

Zone should be considered as per ASCE 7-16, Fig. 30.3-2A to 30.3-2D

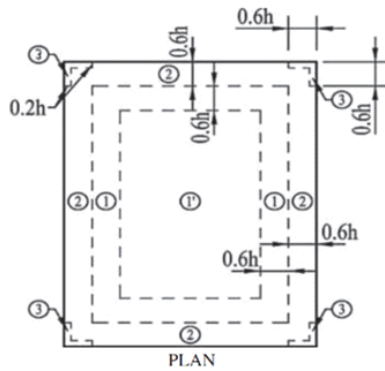

Gable Roofs $\theta \leq 7^\circ$

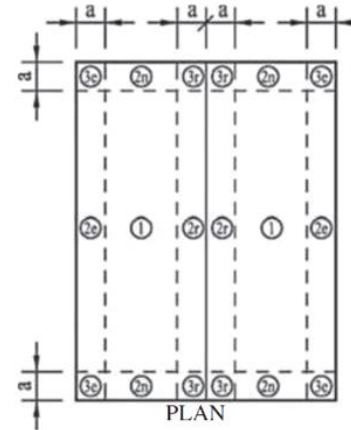


Gable Roofs $7^\circ < \theta \leq 45^\circ$

Grouping of ASCE 7-16 Roof Zones (Gable and Flat)

- **Roof Tilt 0° - 7°**
 - Roof Zone 1 = 1
 - Roof Zone 2 = 2
 - Roof Zone 3 = 3
- **Roof Tilt 7° - 27°**
 - Roof Zone 1 = 1, 2e
 - Roof Zone 2 = 2n, 2r, 3e
 - Roof Zone 3 = 3r
- **Roof Tilt 27° - 45°**
 - Roof Zone 1 = 1, 2e, 2r
 - Roof Zone 2 = 2n, 3r
 - Roof Zone 3 = 3e

Rails can be installed in these possible orientations.

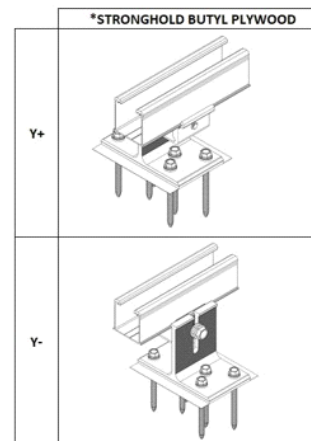

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Ground Snow Load (psf)	Wind Exposure Category	Roof Tilt Angle (deg)	Panel Exposure	Basic Wind Speed (mph)																																							
				Roof Wind Zone																																							
				90			95			100			105			110			115			120			130			140			150			160			170			180			
				1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3				
60	B	0-7	Interior	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	9	10	10	8	10	10	7					
			Exposed	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	9	10	10	10	10	10	10	9	6	10	8	9	7	7					
		Exposed	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	10	8	11	9	7	11	8	6					
		Exposed	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	14	9	6	14	8	5	12	7	5	11	6	6	
		Exposed	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	18	17	12	16	15	10	15	13	8	15	13	7	14	9	6
		Exposed	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	10	8	10	9	7	10	8	7	8				
	Exposed	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	14	9	15	12	8	15	11	7	14	9	6			
	Exposed																																										

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

[illegible]

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

