

Design Criteria for Span Tables:

Values in the maximum allowable rail span tables provided herein are subject to the following general criteria and additional criteria shown on individual span tables sheets. Values in span tables are based on the same engineering methodology and calculation algorithms used for U-Builder and are provided here for reference.

Building Assumptions

- Building Risk Category: II
- Mean Roof Height: 30 ft
- Roof Pitch: 0°-45°
- Site Elevation: 0 ft

Wind Design Assumptions

- Wind loads used are based on ASCE 7-16 Sec 29.4.4 with Provisions from SEAOC PV2-2017
- Exposure Category B, C, or D
- Basic Wind Speed = 90 – 180 mph
- Level terrain. Topographic factor, $k_{zt} = 1.0$
- $\gamma_E = 1.0$ for 'Interior' spans, $\gamma_E = 1.5$ for 'Exposed' spans (ASCE 7-16, Fig. 29.4-7)

Snow Design Assumptions

- Ground Snow Load = 0-100 psf
- Exposure Factor coefficients of Partially Exposed condition
- Thermal Factor = 1.0
- Results based on uniform snow load

Seismic Design Assumptions


- 0.2-s Spectral Response Acceleration, $S_S \leq 3$
- $S_S = 1.25$ and 3 per criteria shown on individual span tables sheets.
- $S_1 = 0.5$
- Seismic site class D

Array Assumptions


- Module orientation and Rail direction per criteria shown on individual span tables sheets.
- Maximum module dimensions of 40.1" x 67" (~19 sq.ft, 47.65 lbs) and 41" x 80" (~23 sq.ft, 58.6 lbs) per criteria shown on individual span tables sheets.
- Minimum distance between modules and roof edge is at least twice the module height above roof surface.
- Modules are parallel to roof surface and maximum height above roof surface is 5" to 10" depending on attachment type.
- Gaps between module rows and columns is 0.25" in to 1" depending on clamp type.
- The most restrictive of all roof zone spans shall be used when any part of the module is attributed to that span.
- 'Exposed' spans as defined in ASCE 7-16 sec. 29.4.4 shall be used when any part of an exposed module or panel as is attributed to that span.

Span Tables

Zone should be considered as per ASCE 7-16, Fig. 30.3-2A to 30.3-2D

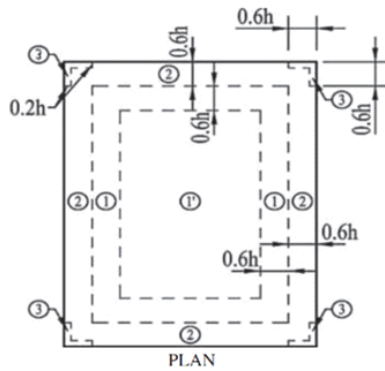

Gable Roofs $\theta \leq 7^\circ$

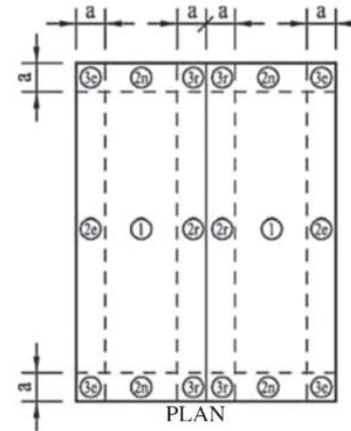


Gable Roofs $7^\circ < \theta \leq 45^\circ$

Grouping of ASCE 7-16 Roof Zones (Gable and Flat)

- **Roof Tilt 0° - 7°**
 - Roof Zone 1 = 1
 - Roof Zone 2 = 2
 - Roof Zone 3 = 3
- **Roof Tilt 7° - 27°**
 - Roof Zone 1 = 1, 2e
 - Roof Zone 2 = 2n, 2r, 3e
 - Roof Zone 3 = 3r
- **Roof Tilt 27° - 45°**
 - Roof Zone 1 = 1, 2e, 2r
 - Roof Zone 2 = 2n, 3r
 - Roof Zone 3 = 3e

Rails can be installed in these possible orientations.

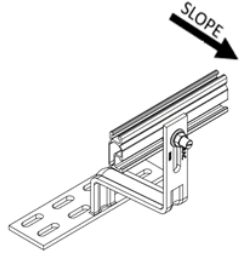*CT1	
Y+	Alternate orientation not allowed
Y-	

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

[illegible]

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



30 ft

19 sq ft

CROSS SLOPE

PRO SERIES

Solarheals CT1

SPAN TABLES

Ground Snow Load (psf)	Wind Exposure Category	Roof Tilt Angle (deg)	Panel Exposure	Basic Wind Speed (mph)																																						
				90			95			100			105			110			115			120			130			140			150			160			170			180		
				1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3			
90	B	0-7	Interior	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16				
			Exposed	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16				
		Exposed	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	26	26						
		Exposed	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	22					
		Exposed	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26					
		Exposed	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16						
	Exposed	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	26	24	18							
	Exposed	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	24	16						

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.

[illegible]

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Ground Snow Load (psf)	Wind Exposure Category	Roof Tilt Angle (deg)	Panel Exposure	Basic Wind Speed (mph)																																						
				90			95			100			105			110			115			120			130			140			150			160			170			180		
				1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3			
90	B	0-7	Interior	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16				
			Exposed	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16				
		7-20	Interior	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	26				
			Exposed	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	26	26					
		20-27	Interior	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27				
			Exposed	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27					
	27-45	Interior	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26					
		Exposed	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26	26						
	C	0-7	Interior	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16					
			Exposed	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16						
		7-20	Interior	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	26					
			Exposed	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	26						
		20-27	Interior	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27					
			Exposed	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27	27					
	27-45	Interior	26	26	26	26	26</																																			

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



30 ft

23 sq ft

CROSS-SLOPE

LIFE

SPAN TABLES

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



11

30 ft
Roof Height

S_s = 3.00

19 sq.ft
Module Area:

ORIENTATION

CROSS-SLOPE
Rail Direction

SML
Rail Type

UAF
Clamp

Solarhooks CT1

SPAN TABLES

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.