



UNIRAC Code-Compliant Installation Manual

© 2022 by Unirac, Inc. All rights reserved.

UNIRAC welcomes input concerning the accuracy and user-friendliness of this publication. Please write to publications@unirac.com.



INSTALLATION GUIDE

TABLE OF CONTENTS	PG
INSTALLER RESPONSIBILITY	1
SYSTEM COMPONENTS.....	2-3
SYSTEM INSTALLATION STEPS	4-5

The installer is solely responsible for:


- Complying with all applicable local or national building codes, including any that may supersede this manual;
- Ensuring that Unirac and other products are appropriate for the particular installation and the installation environment;
- Ensuring that the roof, its rafters, connections, and other structural support members can support the array under building live load conditions;
- Using only Unirac parts and installer-supplied parts as specified by Unirac (substitution of parts may void the warranty);
- Maintaining the waterproof integrity of the roof; and
- Ensuring safe installation of all electrical aspects of the PV array.

Flat top 2-piece aluminum:

Use with SunFrame, SolarMount Standard, SolarMount Light, or SolarMount HD rails.
Secure to rafter with 2 lag screws (sold separately). Secure L-foot or installer -supplied strut directly to standoff with standoff hardware. Especially convenient when installing over a tile roof because flashing can be precisely fitted over secured base prior to installation of shaft

System Components:

1. Shaft (O.D.- $1\frac{5}{8}$ ")
2. Base assembly
3. Bolt, $\frac{3}{8}$ " x $\frac{3}{4}$ " Flange Head
4. EPDM Washer
5. 2 Lags ($\frac{5}{16}$ ") sold separately

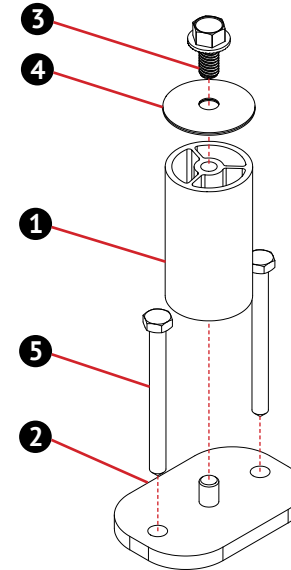**STANDOFF ASSEMBLY**

Note: The installer is solely responsible for determining whether lags are adequate to handle live and dead loads under wind conditions at the installation site. Wind loads and lag pullout capacities are addressed in Code-Compliant installation manual for SolarMount (Installation Manual 227) and SunFrame (Installation Manual 809).

Standoffs:

Standoffs: 3-, 4-, 6-, and 7-inch lengths are available

S.NO.	DESCRIPTION	PART NUMBER
1	STANDOFF 3" 2 PIECE AL, MILL	004300D
2	STANDOFF 3" 2 PIECE AL, DRK	004300M
3	STANDOFF 4" 2 PIECE AL, MILL	004400D
4	STANDOFF 4" 2 PIECE AL, DRK	004400M
5	STANDOFF 6" 2 PIECE AL, MILL	004600D
6	STANDOFF 6" 2 PIECE AL, DRK	004600M
7	STANDOFF 7" 2 PIECE AL, MILL	004700D
8	STANDOFF 7" 2 PIECE AL, DRK	004700M

Flashings:

Flashings for all current standoffs ($1\frac{5}{8}$ " O.D. shaft)(see illustrations, page-4 &5)

S.NO.	DESCRIPTION	PART NUMBER
1	Collared, aluminum (9" x12")	004015C
2	Collared, soft aluminum (18" x18")	004013C

***Packs of 12 flashings.**

Flashing refers to thin, continuous pieces of sheet metal or other impervious material installed to prevent the passage of water into a structure from an angle or joint.

Flashing generally operates on the principal that, for water to penetrate a joint, it must work itself upward against the force of gravity or in the case of wind-driven rain, it would have to follow a tortuous path during which the driving force will be dissipated.

Unirac offers flashings to be used specifically with Unirac standoffs. These flashings are collared, thereby eliminating the need for the use of sealant between standoff and flashing. The flashing slides over the standoff, under the shingle above, and over the shingle below.

The following installation instruction provides an explanation of planning and installation of two different applications.

Planning and installation:

There are many possible configurations of standoffs and flashing. The two examples here illustrate major product varieties and installation settings.



Example 1

2-piece, aluminum, flat top standoff

Soft aluminum flashing

Tile roof

SunFrame (shown) or SolarMount rail

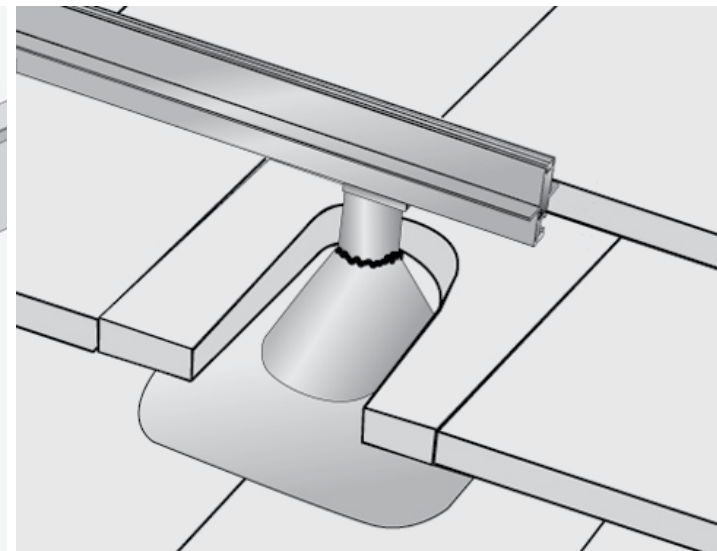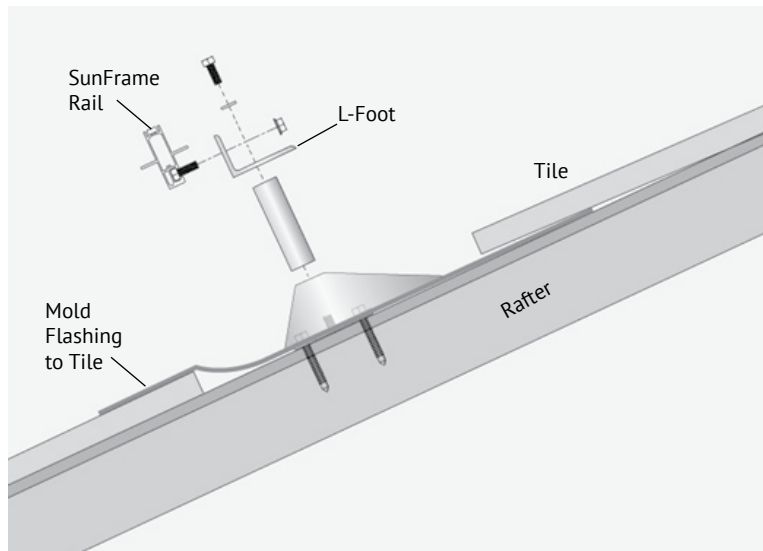

Remove a tile over a rafter. Install the base of a two-piece standoff, ensuring that both lag bolts are screwed into the rafter. Install soft aluminum flashing over the base, inserting it under the tile above and forming it to the shape of the tile. Insert standoff shaft through the opening in the flashing, screwing it down firmly in place onto the base. Seal with roofing cement or other appropriate compound.

Attach L-feet to standoffs. Slide L-foot mounting bolts along slot on SunFrame (or SolarMount) rail. Insert footing bolts through L-feet and fasten with flange nuts.



Example 2

2-piece, aluminum, flat top standoff

No-Calk™ flashing

Shingled roof

SunFrame (shown) or SolarMount rail

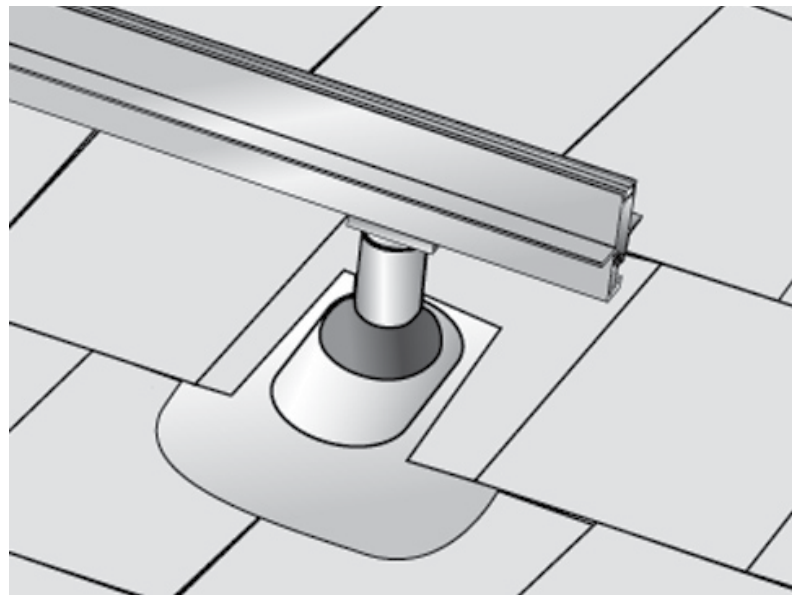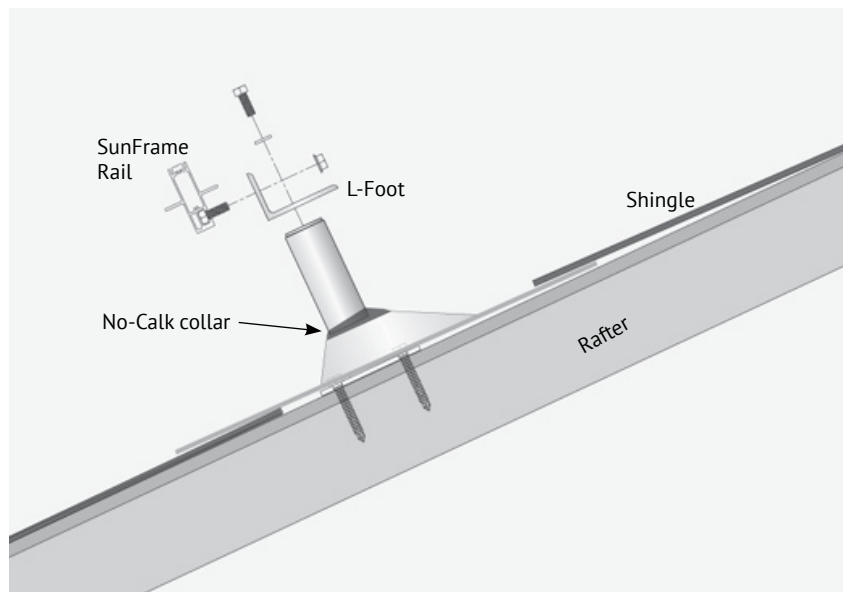

Cut an opening in the roofing material over a rafter to accommodate the flashing riser. Install the standoff, ensuring that both lag bolts are screwed into the rafter. Insert the flashing under the shingle above and over the shaft of the standoff. No-Calk collar does not require sealing of the flashing and standoff shaft. Attach L-feet to standoffs. Slide L-foot mounting bolts along slot on SunFrame (or SolarMount) rail. Insert footing bolts through L-feet and fasten with flange nuts.

Warranty Information

See <http://www.unirac.com> for current warranty documents and information.