FLASHKIT PRO SWITCHBLADE

INSTALLATION GUIDE

FLASHKIT PRO SWITCHBLADE IS THE COMPLETE FLASHING AND ATTACHMENT SOLUTION FOR COMPOSITION ROOFS.

INSTALL FLASHKIT PRO SWITCHBLADE FLASHING

INSTALL L-FOOT

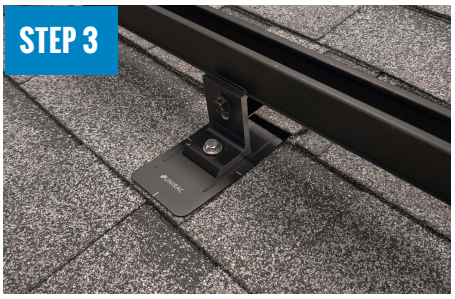

ATTACH L-FOOT TO RAIL

PRE-INSTALL

- Locate roof rafters and snap chalk lines to mark the installation point for each roof attachment.
- Drill a 7/32" pilot hole at each roof attachment. Fill each pilot hole with sealant.

STEP 1

INSTALL FLASHKIT PRO SWITCHBLADE FLASHING

- Add a U-shaped bead of roof sealant to the underside of the flashing with the open side of the U pointing down the roof slope. Slide the aluminum flashing underneath the row of shingles directly up slope from the pilot hole as shown. Align the indicator marks on the lower end of the flashing with the chalk lines on the roof to center the raised hole in the flashing over the pilot hole in the roof. When installed correctly, the flashing will extend under the two courses of shingles above the pilot hole.

STEP 2

INSTALL L-FOOT

- Position L-foot so that the grommet aligns with the hole on the flashing. Insert the provided lag bolt with washer through the L-foot EPDM grommet on top of the flashing. Verify proper orientation before driving the lag bolt.
- Drive the lag bolt down until the L-foot is held firmly in place. It is normal for the EPDM on the underside of the stainless steel backed EPDM washer to compress and expand beyond the outside edge of the steel washer when the proper torque is applied.

TIP:

- Use caution to avoid over-torqueing the lag bolt if using an impact driver.
- Repeat Steps 1 and 2 at each roof attachment point.

STEP 3 ATTACH L-FOOT TO RAIL

Follow SolarMount (SM) or NXT Horizon Installation Guide for instructions on attaching L-Foot to rail and torque values.