


## INSTALLATION GUIDE

### STEP 1: INSTALL J-BOX

Orient the **J-box** Mount to match the mounting method (for L-foot mounting, see instructions below). Use slots, or other preferred method, to attach the **J-box** to the mount using enclosure hardware (not included). The slots on the **J-box** mount accommodate up to a 6" x 6" hole pattern.

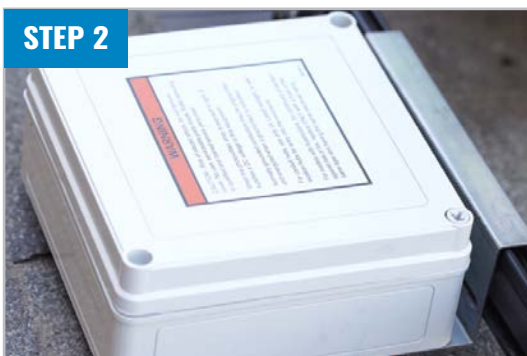

### STEP 2: MOUNT J-BOX (RAIL INSTALLATION)

Attach **J-box** and mount to the rail by placing the hanger over the rail and pressing mount in place. This can be done either below or to the side of the module. For taller **J-boxes**, or thinner modules (32mm – 33mm), mounting to the side of the module is recommended.

### STEP 3: MOUNT J-BOX (L-FOOT INSTALLATION)

Refer to **Flashkit Pro** instruction manual on proper flashing and L-foot installation. Note that an L-foot holding a J-box can be installed directly to the roof deck using a 5/16" x 2" Lag bolt (sold separately). Once L-foot is in place and **J-Box** is installed on the mount, center the bracket over the L-foot and slide it down onto the L-foot until the tabs engage the L-foot slot.

#### TIPS:

**L-FOOT MOUNTING:** When mounting to an L-foot, orient the L-foot so that the lag bolt is downslope from the vertical flange so that **J-box** mount sits over flashing as much as possible.



**EVERYTHING YOU NEED FOR A QUICK, PROFESSIONAL INSTALLATION**

FOR QUESTIONS OR CUSTOMER SERVICE VISIT [UNIRAC.COM](http://UNIRAC.COM) OR CALL (505) 248-2702