

Design Criteria for Span Tables:

Values in the maximum allowable rail span tables provided herein are subject to the following general criteria and additional criteria shown on individual span tables sheets. Values in span tables are based on the same engineering methodology and calculation algorithms used for U-Builder and are provided here for reference.

Building Assumptions

- Building Risk Category: II
- Mean Roof Height: 30 ft
- Roof Pitch: 0°-45°
- Site Elevation: 0 ft

Wind Design Assumptions

- Wind loads used are based on ASCE 7-22 Sec. 29.4.4
- Exposure Category B, C, or D
- Basic Wind Speed = 90 – 180 mph
- Level terrain. Topographic factor, $k_{zt} = 1.0$
- $\gamma E = 1.0$ for 'Interior' spans, $\gamma E = 1.5$ for 'Exposed' spans (ASCE 7-22, Fig. 29.4-7)

Snow Design Assumptions

- Ground Snow Load = 0-100 psf
- Exposure Factor coefficients of Partially Exposed condition
- Thermal Factor = 1.0
- Results based on uniform snow load

Seismic Design Assumptions


- 0.2-s Spectral Response Acceleration
- $S_s = 1.25$ and 3 with $S_d = 1, 2.4$ respectively per criteria shown on individual span tables sheets.
- $S_1 = 0.5$ & $S_d1 = 0.6$
- Seismic site class D

Array Assumptions


- Module orientation and Rail direction per criteria shown on individual span tables sheets.
- Maximum module dimensions of 40.1" x 67" (~19 sq.ft, 47.65 lbs) and 41" x 80" (~23 sq.ft, 58.6 lbs) per criteria shown on individual span tables sheets.
- Minimum distance between modules and roof edge is at least twice the module height above roof surface.
- Modules are parallel to roof surface and maximum height above roof surface is 5" to 10" depending on attachment type.
- Gaps between module rows and columns is 0.25" in to 1" depending on clamp type.
- The most restrictive of all roof zone spans shall be used when any part of the module is attributed to that span.
- 'Exposed' spans as defined in ASCE 7-22 sec. 29.4.4 shall be used when any part of an exposed module or panel as is attributed to that span.

Span Tables


Zone should be considered as per ASCE 7-22, Fig. 30.3-2A to 30.3-2D

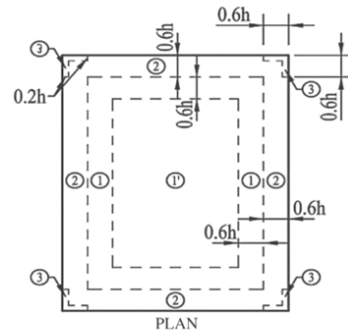

Gable Roofs $\theta \leq 7^\circ$

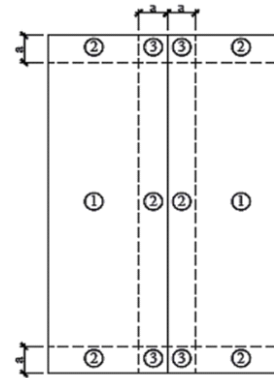

Gable Roofs $7^\circ < \theta \leq 27^\circ$

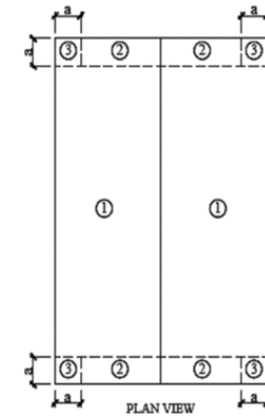

Gable Roofs $27^\circ < \theta \leq 45^\circ$

Rails can be installed in these possible orientations.

#N/A

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

34 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



II
Risk Category

Ss = 1.25
Seismic

LANDSCAPE

NXT
Rail Ty

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	---------------------

SPAN TABLES

[illegible]

#N/A

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

40 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



II
Risk Category

30 ft
Roof Height

Ss = 1.25
Seismic

23 sq.ft
Module Area

ORIENTATION

CROSS-SLO
Rail Direction

Rail Type
NXT HD

NXT COM

Flash

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an astrisks indicates that the L-root must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



II
Risk Category

Ss = 1.25

ORIENTATION

NXT HD	
Rail Type	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

Flashkit Pro
Attachment

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

#N/A

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

40 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



II
Risk Category

30 ft

Roof Height

S_s = 3.00

23 sq.ft

Module Area

ORIENTATION

CROSS-SLOPE

NXT HD
Rail Type

NXT COMBO

Flashkit Pro
Attachment

Maximum Allowable Rail Spans for Rooftop Solar Panels Parallel to the Roof Surface (inches)

[illegible]

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



II
Risk Category

30 ft

Roof Height

Ss = 3.00

23 sq.ft

ORIENTATION

CROSS-SLOP

NXT HD	Rail Type
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

NXT COMB

Flashki
Attache

SPAN TABLES

[illegible]

* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10	Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.
10	Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.



II
Risk Category

Ss = 1.25
Seismic

LANDSCAPE
Orientation

NXT HD	
Rail Type	

Flash
Attac

SPAN TABLES

[illegible]

#N/A

* Cells with an astrisks indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.