

Design Criteria for Span Tables:

Values in the maximum allowable rail span tables provided herein are subject to the following general criteria and additional criteria shown on individual span tables sheets. Values in span tables are based on the same engineering methodology and calculation algorithms used for U-Builder and are provided here for reference.

Building Assumptions

- Building Risk Category: II
- Mean Roof Height: 30 ft
- Roof Pitch: 0°-45°
- Site Elevation: 0 ft

Wind Design Assumptions

- Wind loads used are based on ASCE 7-16 Sec 29.4.4 with Provisions from SEAOC PV2-2017
- Exposure Category B, C, or D
- Basic Wind Speed = 90 – 180 mph
- Level terrain. Topographic factor, $k_{zt} = 1.0$
- $\gamma_E = 1.0$ for 'Interior' spans, $\gamma_E = 1.5$ for 'Exposed' spans (ASCE 7-16, Fig. 29.4-7)

Snow Design Assumptions

- Ground Snow Load = 0-100 psf
- Exposure Factor coefficients of Partially Exposed condition
- Thermal Factor = 1.0
- Results based on uniform snow load


Seismic Design Assumptions

- 0.2-s Spectral Response Acceleration, $S_S \leq 3$
- $S_S = 1.25$ and 3 per criteria shown on individual span tables sheets.
- $S_1 = 0.5$
- Seismic site class D


Array Assumptions

- Module orientation and Rail direction per criteria shown on individual span tables sheets.
- Maximum module dimensions of 40.1" x 67" (~19 sq.ft, 47.65 lbs) and 41" x 80" (~23 sq.ft, 58.6 lbs) per criteria shown on individual span tables sheets.
- Minimum distance between modules and roof edge is at least twice the module height above roof surface.
- Modules are parallel to roof surface and maximum height above roof surface is 5" to 10" depending on attachment type.
- Gaps between module rows and columns is 0.25" in to 1" depending on clamp type.
- The most restrictive of all roof zone spans shall be used when any part of the module is attributed to that span.
- 'Exposed' spans as defined in ASCE 7-16 sec. 29.4.4 shall be used when any part of an exposed module or panel as is attributed to that span.

Zone should be considered as per ASCE 7-16, Fig. 30.3-2A to 30.3-2D

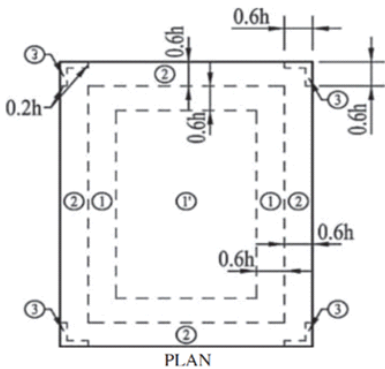

Gable Roofs $\theta \leq 7^\circ$

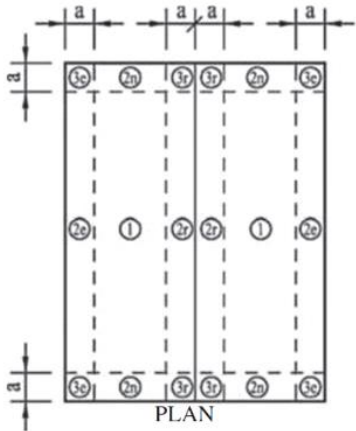

Gable Roofs $7^\circ < \theta \leq 45^\circ$

Grouping of ASCE 7-16 Roof Zones (Gable and Flat)

- **Roof Tilt 0° - 7°**
Roof Zone 1 = 1
Roof Zone 2 = 2
Roof Zone 3 = 3
- **Roof Tilt 7° - 27°**
Roof Zone 1 = 1, 2e
Roof Zone 2 = 2n, 2r, 3e
Roof Zone 3 = 3r
- **Roof Tilt 27° - 45°**
Roof Zone 1 = 1, 2e, 2r
Roof Zone 2 = 2n, 3r
Roof Zone 3 = 3e

Rails can be installed in these possible orientations.

*Flashloc DUO for OSB	
Y+	
Y-	Alternate orientation not allowed

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



11

30 ft
Roof Height

S_s = 1.25

19 sq.ft
Module Area:

LANDSCAPE

CROSS-SLOPE
Rail Direction

SML
Rail Type

PRO SERIES
Clamp

Flashloc DUO OSB
Attachment

SPAN TABLES

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Ground Snow Load (psf)	Wind Exposure Category	Roof Tilt Angle (deg)	Panel Exposure	Basic Wind Speed (mph)																																						
				90			95			100			105			110			115			120			130			140			150			160			170			180		
				Roof Wind Zone																																						
				1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3			
0	B	0-7	Interior	28	28	28	28	28	26	28	28	23	28	28	21	28	27	19	28	25	17	28	22	15	26	19	13	22	16	11	19	14	9	16	12	8	14	10	7	13	9	10
			Exposed	28	27	19	28	24	17	28	21	15	27	19	13	24	17	12	22	16	11	20	14	10	17	12	8	14	10	7	12	9	9	11	8	8	9	7	7	8	9	6
		7-20	Interior	29	29	26	29	28	23	29	25	20	29	22	18	29	20	16	29	18	15	26	17	14	22	14	11	18	12	10	16	10	8	14	9	7	12	8	10	11	7	9
			Exposed	29	20	16	28	18	14	25	16	13	22	14	12	20	13	11	18	12	10	17	11	9	14	9	7	12	8	10	10	6	8	9	9	7	8	8	6	7	7	5
		20-27	Interior	29	29	29	29	29	26	29	29	22	29	27	19	29	24	17	29	22	15	29	20	13	29	17	11	25	14	10	22	12	8	19	11	7	16	9	6	14	8	6
			Exposed	29	24	17	29	22	15	29	19	13	29	17	12	27	16	10	25	14	10	23	13	9	19	11	7	16	9	6	14	8	5	12	7	7	11	9	6	9	8	5
	C	0-7	Interior	29	29	29	29	29	29	29	29	29	28	29	29	25	29	22	29	28	20	28	25	18	24	21	14	20	18	12	17	16	10	15	14	8	13	12	7	12	10	6
			Exposed	29	29	22	29	29	27	19	27	24	22	15	22	20	13	20	18	12	18	16	10	15	14	8	13	12	7	11	10	6	10	9	5	9	8	7	8	7	7	
		7-20	Interior	26	18	13	23	16	11	20	15	10	18	13	9	17	12	8	15	11	7	14	10	7	11	8	9	10	7	8	8	9	6	7	8	6	10	7	5	9	6	4
			Exposed	29	21	18	29	19	16	27	17	14	24	15	13	22	14	11	20	13	10	18	11	9	16	10	9	15	8	13	8	7	11	7	9	9	8	8	7	7	7	
		20-27	Interior	21	14	11	19	12	10	17	11	9	15	10	8	14	9	7	13	8	7	11	7	9	10	8	8	8	7	7	9	6	9	6	6	5	8	6	4	7	5	4
			Exposed	29	26	19	29	23	16	29	21	14	29	19	12	29	17	11	27	15	10	24	14	9	20	12	8	17	10	7	15	9	6	13	7	8	11	6	7	10	9	6
10	D	0-7	Interior	29	17	11	26	15	10	23	13	9	21	12	8	19	11	7	17	10	7	16	9	5	13	7	8	11	10	6	9	8	6	7	6	4	10	6	4			
			Exposed	24	21																																					

Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

40 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

34 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.

[illegible]

Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Ground Snow Load (psf)	Wind Exposure Category	Roof Tilt Angle (deg)	Panel Exposure	Basic Wind Speed (mph)																																						
				90			95			100			105			110			115			120			130			140			150			160			170			180		
				Roof Wind Zone																																						
				1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3						
90	B	0-7	Interior	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	8					
			Exposed	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	8					
		7-20	Interior	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	8				
			Exposed	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	8					
		20-27	Interior	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	9				
			Exposed	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	9					
	C	27-45	Interior	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16				
			Exposed	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16						
		0-7	Interior	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	8					
			Exposed	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	8						
		7-20	Interior	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	8				
			Exposed	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	8					
D	20-27	Interior	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	9					
		Exposed	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	9						
	27-45	Interior	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16					
		Exposed	16	16	16</																																					

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Ground Snow Load (psf)	Wind Exposure Category	Roof Tilt Angle (deg)	Panel Exposure	Basic Wind Speed (mph)																																							
				Roof Wind Zone																																							
				90			95			100			105			110			115			120			130			140			150			160			170			180			
				1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3	1	2	3				
0	B	0-7	Interior	55	55	55	55	55	52	55	55	55	46	55	55	41	55	54	37	55	49	34	55	44	31	52	37	26	44	31	22	38	27	19	33	24	17	29	21	15	25	18	13
			Exposed	55	53	37	55	47	33	55	42	29	53	38	26	48	34	24	43	31	22	39	28	20	33	24	17	28	20	14	24	18	12	21	15	16	19	13	14	16	18	13	
		7-20	Interior	56	56	51	56	55	45	56	49	40	56	44	36	56	40	33	56	36	30	51	33	27	43	28	23	37	24	19	31	20	17	27	18	15	24	16	13	21	14	17	
			Exposed	56	40	32	55	35	29	49	31	26	44	28	23	40	26	21	36	23	19	33	21	17	28	18	15	24	15	13	20	13	16	18	17	14	16	15	13	14	14	14	
		20-27	Interior	56	56	56	56	56	52	56	56	44	56	54	39	56	48	34	56	44	30	56	40	27	56	34	23	50	29	19	43	25	17	37	21	15	33	19	13	29	17	11	
	Exposed		56	48	34	56	43	29	56	38	26	56	34	23	54	31	21	49	28	19	45	26	17	38	22	15	32	18	13	28	16	11	24	14	9	21	12	13	19	16	11		
	27-45	Interior	57	57	57	57	57	57	57	57	56	57	57	49	57	57	44	57	55	39	56	50	35	47	28	40	36	24	35	31	20	30	27	17	26	24	15	23	21	13			
		Exposed	57	57	43	57	53	38	54	48	33	48	43	29	44	39	26	40	35	23	36	32	21	30	27	17	26	23	14	22	20	12	20	18	11	17	15	9	15	14	13		
	C	0-7	Interior	55	55	40	55	51	35	55	46	32	55	41	28	52	37	26	47	33	23	42	30	21	36	26	18	30	22	15	26	19	13	23	16	18	20	14	15	18	13	14	
			Exposed	51	37	26	45	33	23	41	29	20	36	26	18	33	24	17	30	22	15	27	20	14	23	17	18	20	14	15	17	12	13	15	16	11	13	14	10	17	13	9	
7-20		Interior	56	43	35	56	38	31	53	34	28	47	30	25	43	27	23	39	25	21	35	23	19	30	19	16	25	16	13	22	14	12	19	12	15	17	16	14	15	15	12		
		Exposed	43	27	22	38	24	20	34	22	18	30	20	16	27	18	15	25	16	13	23	15	12	19	12	16	16	16	13	14	14	12	19	12	10	16	11	15	10	8			
20-27		Interior	56	52	37	56	46	32	56	41	28	56	37	25	56	33	23	53	30	20	48	28</																					

Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



11

30 ft
Roof Height

S_s = 3.00

23 sq.ft
Module Area

LANDSCAPE

CROSS-SLOPE
Rail Direction

SML
Rail Type

PRO SERIES
Clamp

Flashloc DUO OSB
Attachment

SPAN TABLES

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.



* Cells with an asterisk indicates that the L-root must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

40 Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

Highlighted cell with strikethrough indicate 3-rail system span and module clamp allowable capacity exceeds with 3-rails. 4-Rail system required. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.

10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



10 Highlighted cell indicate 3-rail system span. Contact Unirac Engineering Services for support.

[illegible]

* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.



* Cells with an asterisk indicates that the L-foot must be oriented in the Y- direction as indicated in the image.